Frontier™ TV P265v3 Remote Control Manual

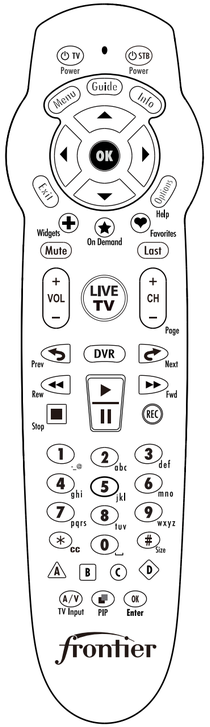

For additional information about your Frontier TV service and your remote, call 877-462-0488

For video instructions, press the <**Menu**> key on your remote then select **Help** on the Main Menu

Thank you for subscribing to Frontier TV Service. This User Manual will show you how to program and operate your new Frontier TV Remote Control (Model P265v3).

Quick Setup Guide Frontier remote

The following steps will guide you to quickly set-up your Frontier TV remote for your TV.

1. Turn on your TV and the Frontier STB. Make sure you can see live television.

2. Locate the 3-digit code for your TV brand in the list to the right and circle the correct code.

If your TV brand is not listed, codes for additional TV brands are listed at the back of this manual.

3. Once you locate the brand code, press and hold the <**OK**> and (0) keys together. The RED LED on the remote control will blink twice and then stay on.



4. Enter the 3-digit TV code for your TV brand using the number pad. The RED LED will blink twice and then stay on.



5. Press and release the <**CH +**> button repeatedly until the TV turns off. You can also "back up" by pressing the <**CH -**> button.



*Please note – some TVs may respond slower than others. Please allow 1 second between button presses.

6. Test that remote control is programmed for your TV
a. Turn the TV on using the (TV) key.
b. Press <**VOL +**> and <**VOL -**> to make sure that the volume keys work.
c. Press (Mute) and (A/V) keys.
d. If any of these keys do not work as expected, press and hold that key. Release it as soon as it works.



7. If all these keys work, press <**OK**> to save this TV brand code programming. The RED LED will blink 3 times and then turn off

Your Remote Control is now programmed for your TV!

Acronyms
1. RC = Remote Control
2. STB = Frontier TV Set Top Box
3. VOL = Volume
4. CH+ = Channel Up
5. CH- = Channel Down

Frontier TV Remote Control Codes for Major TV Brands

TV Brand	Code
AOC	026
Audiovox	035
Coby	070
Envision	114
Funai	128
Haier	146
Hitachi	164
Insignia	180
JVC	193
LG	210
Magnavox	222
Mitsubishi	243
Panasonic	279
Philips	285
Pioneer	290
Polaroid	294
Proscan	302
RCA	321
Samsung	331
Sansui	332
Sanyo	333
Sceptre	335
Sharp	342
Sony	352
Sylvania	371
Toshiba	397
Viewsonic	418
Vizio	424
Westinghouse	433
Zenith	440

8) Troubleshooting
a. If the (TV) button does not work correctly, make sure the TV is on and go back to Step 1 of the **Quick Start Guide**. You can also try the **Code Search Method** below.
b. If the <**VOL**>, <**Mute**>, or <**A/V**> buttons do not work correctly, please refer to the **Key Fix Feature**.
c. If you think you made a mistake with programming your remote, you can always press the <**Exit**> button and start over. The RED LED will turn off if the RC is not in programming mode.
d. If you don't press any buttons for 60 seconds, the remote control will automatically exit programming mode.
e. Note, if you press the <**CH**> button many times and the lights on the remote control all flash rapidly, the programming attempt was not successful.
f. If the Brand Search method does not work, please try the Code Search Method below, which scans the complete database for all TV codes.
g. If you are still having problems programming the remote, please call 877-462-0488

Code Search Method to Program the RC
(This method could take up to 12 minutes)

1. Turn on your TV and the Frontier STB.
2. Make sure you can see live television.
3. Press and hold the <**OK**> and (LIVE TV) buttons together, then release both.
• The RED LED will blink twice and then stay on.
4. Press and hold down the (▶) button.
5. The Remote Control will try a new TV code every second, and the RED LED will blink each time a new code is sent.
6. When the TV turns off, stop pressing the play button right away.
• Please note – some TVs may respond slower than others.
7. You can press the <**CH +**> or <**CH -**> buttons to go forward or back one TV code at a time.
8. Test that the remote control is programmed for your TV.
a. Turn the TV on using the (TV) key.
b. Press <**VOL +**> and <**VOL -**> to make sure that the volume keys work.
c. Press (Mute) and (A/V).
d. If any of these keys do not work as expected, press and hold that key. Release it as soon as it works.
9. If these keys all work, press <**OK**> to save this TV brand code programming. The RED LED will blink 3 times and then turn off.

Your Remote Control is now programmed for your TV!

10. Troubleshooting
a. If the (TV) button does not work correctly, make sure the TV is on and go back to Step 1 of the **Code Search Method**.
b. If the <**VOL**>, <**Mute**>, or <**A/V**> buttons do not work correctly, please refer to the **Key Fix Feature**.
c. If you think you made a mistake with programming your remote, you can always press the <**Exit**> button and start over. The RED LED will turn off if the RC is not in programming mode.
d. **Please Note, the Code Search Method could take up to 8 minutes,** as it must go through over 500 codes. The most common codes are tried first, but you may need to press and hold (▶) for a while to locate the correct code.
e. Once you have tried all the TV codes in the remote control, the RED LED and the backlit buttons will flash 4 times rapidly, the RED LED will turn off and the remote will exit the programming mode.
f. If you are still having problems programming the remote, please call 877-462-0488

OPTIONAL FEATURES
<STB Power> Button Turns on TV and STB
Your remote has separate power buttons for the TV and STB. You can program the (STB) key to turn on/off both your TV and STB at the same time.

1. Turn both your **TV** and **STB** on.
2. Press and hold the <**OK**> and (2) buttons together, then release both.
• The RED LED will blink twice and then stay on.
3. Press **9** – **7** – **7**.
• The RED LED will blink twice and remain on.
4. Press (STB).
• The RED LED will blink 3 times and then turn off.
5. Test that the (STB) key now turns on the TV and STB at the same time.
6. If you want to reset the remote so that the (STB) key controls **Only** the **STB**, follow the same steps as above but press <**OK**> in Step 4.

Control TV Volume Through STB
If the volume control keys don't work with your TV, you can program the remote so that the STB will control the volume.

1. Press and hold the <**OK**> and (2) buttons together, then release both.
2. The RED LED will blink twice and then stay on.
3. Press **9** - **5** – **5**.
4. The RED LED light will blink twice, and remain on.
5. Press (STB).
6. The RED LED will blink 3 times and then turn off.
7. If you want to change it back again so that volume buttons control the TV follow the same steps as above but press (TV) in Step 5.

Key Fix
If your remote control is programmed for your TV, but the <**VOL**>, <**Mute**>, or the <**A/V**> keys do not work correctly, then you can try using the Key Fix feature to fix the buttons.

1. Press and hold the <**OK**> and (✳) buttons simultaneously.
• The RED LED will blink twice and then stay on.
2. Press and hold the key that does not work correctly. The remote control will try a new code every second.
3. Once the TV responds correctly, release the button.
4. Press <**OK**> to save the current settings and finish programming your remote control.

Reset the Remote Control Original Settings

1. Press and hold the <**OK**> and (2) buttons together, and release.
2. The RED LED will blink twice and then stay on.
3. Press **9** - **0** – **0**.
4. The RED LED will blink 3 times and then turn off to indicate original settings are restored.
5. CAUTION, all previous programming in the remote control will be lost if you follow this procedure.

General Instructions

1. Make sure the remote control has a clear, unobstructed view of the STB and TV.
2. Your Frontier TV remote control will only operate your Frontier TV STB and your TV.
3. The remote will not operate other devices like DVD Player or Audio Receiver.
4. The <**TV Power**>,<**VOL +**>, <**VOL -**>, <**Mute**> and <**A/V**> buttons will always control your TV.
5. All other keys on the remote control will always control your Frontier TV STB.

Getting Started

1. Turn on your TV and the STB using the (TV) and (STB) buttons.
2. If you have just watched a DVD, make sure your TV is set to the correct A/V Input for your STB.
3. Press the <**CH +**>,or <**CH -**> buttons to see the next higher or lower channel.
4. You can go directly to any channel by entering the channel number on the number pad and pressing <**OK**>.
5. Press (Guide) to see a list of TV programs.
6. Press (Exit) to return to TV watching.
7. Press the (Menu) button to launch the Frontier TV Main Menu. From the Main Menu you can access all the features of your Frontier TV service.
8. Press <▲> <▼> <▶> <◀> keys to navigate through the FrontierCC TV Menus and Guides. To select any item, press <**OK**>.
9. Press (Last) to return to the last channel.
10. Press <**Info**> to see information about the current program.
11. Press <**Exit**> to return to the previous menu option or to watch TV.

New and Special Buttons

1. (★) "On Demand" displays a list of movies and other programs you can watch at any time.
2. (✚) "Widgets" displays local weather, traffic, and other information.
3. (DVR) displays your list of recorded programs if you have DVR service.
4. (❤) "Favorites" displays your list of favorite channels.
5. (▶/II) is a rocker button. Press lower half of the button (II) to pause the program. Press upper half of the button <▶> to continue to play from where you left off.
6. (↶) jumps back 30 seconds in the program you are watching.
7. (↷) jumps forward 30 seconds in the program you are watching.
8. (REC) records the current program.
9. Buttons (↶), (↷), and (REC) will only operate during normal TV watching if you have DVR service.
10. "If the RED LED starts blinking 5 times rapidly when you press the <**CH +/-**>, <**VOL +/-**>, and <**OK**>, or if the buttons stop lighting up, you should replace the remote control batteries"

COMPLETE LIST OF TV BRAND CODES

TV Brand	Code
3M	001
A.R. Systems	002
Abex	003
ABS	600
Accurian	441
Acer	004
Action	442
Admiral	005
Advent	006
Adventura	007
Aftron	443
Aiko	008
Aim	009
Aiwa	010
Akai	011
Akiba	012
Akira	601
Akura	013
Alaron	444
Alba	014
Albatron	015
Alfide	602
Alienware	603
Alleron	016
Allstar	017
A-Mark	445
Ambassador	446
America Action	018
Ampro	019
Amstrad	020
Amtron	021
Anam	022
Anam National	023
Anhua	604
Anitech	024
Ansonic	025
Anthem	447
AOC	026
Aomni	448
Apex Digital	028
Apple	605
Archer	449
Archos	029
Aristona	030
Asberg	031
Astar	032
Atlantic	033
Audiosonic	034
Audio-Technica	450
Audiovox	035
Aurora Systems	451
Aventura	036
Axion	037
Baile	606
Bang & Olufsen	452
Basic Line	038
Baur	039
Beijing	607
Beko	040
Belcor	453
Bell & Howell	041
BenQ	042
Beon	043
Bestar	044
BGH	608
Blue Sky	045
BOSS	046
Boxlight	454
BPL	047
Bradford	048
Brillian	049
Brinkmann	050
Brionvega	051
Brockwood	455
Broksonic	052
Bush	053
Byd:sign	054
C & M	456
Cadia	457
Cailing	609
Candle	055
Canon	056
Carena	057
Carnivale	058
Carver	059
Cascade	060
Casio	458
Cathay	061
CCE	062
Celebrity	063
Celera	064
Centurion	065
Champion	459
Changcheng	610
Changfeng	611
Changhong	066
Chun Yun	612
Chung Hsin	613
Cinego	460
Cinema	614
Cineral	615
Citizen	067
Clairtone	461
Clarion	068
Classic	462
Clatronic	069
CME	463
Coby	070
Colortyme	071
Colt	072
Commercial Solutions	073
Compaq	464
Computime	465
Concerto	074
Condor	075
Conrowa	616
Contec	076
Contec/Cony	077
Continental	617
Craig	078
Crosley	079
Crown	080
Crown Mustang	618
CTX	081
Curtis	082
Curtis Mathes	083
CXC	084
CyberHome	466
CyberPower	619
Cytron	085
Daewoo	086
Dansai	087
Dawa	088
Daytron	089
Dayu	620
Decca	090
Dell	091
Delta	467
Denon	092
Denstar	468
Desmet	093
Diamant	094
Diamond Vision	469
Digisonic	621
Digistar	470
Digital Lifestyles	471
Digital Projection Inc.	472
Dikom	622
Dimensia	096
DirecTV	473
Disney	097
Dixi	098
Dream Vision	474
Dual	099
Dumont	100
Durabrand	101
Dwin	102
Dynatech	475
Dynatron	103
Dynex	104
Eiki	105
Elbe	106
Electroband	107
Electrograph	108
Electrohome	109
Elektra	623
Element	110
Elin	111
Elite	112
Emerson	113
Emprex	476
Encross	477
Envision	114
Epson	115
Erae	478
Erres	116
ESA	117
Euroman	118
Europhon	119
Exquisit	120
Fidelity	121
Finlux	122
Firstline	123
Fisher	124
FlexVision	479
Flint	125
Fortress	624
Fraba	126
Frigidaire	625
Fujimaro	626
Fujimaru	627
Fujitsu	127
Funai	128
Furi	628
Futuretech	129
Galaxis	130
Garrard	480
Gateway	131
GE	132
GEC	133
Genexxa	134
GFM	135
Gibralter	136
Gibson	629
Go Video	137
Goldline	138
GoldStar	139
Goodmans	140
GPX	141
Gradiente	142
Granada	143
Grundig	144
Grunpy	145
H & B	481
Haier	146
Hallmark	147
Hankook	630
Hanns.G	482
Hannspree	148
Hanseatic	149
Hantarex	150
Hantor	151
Harley Davidson	152
Harman/Kardon	153
Harsper	483
Harvard	154
Harwood	155
Hauppauge	631
Havermy	156
HCM	157
Helios	158
Hello Kitty	159
Heran	632
Herosonic	633
Hewlett Packard	160
Hikona	634
HiLine	161
Hinari	162
Hisense	163
Hitachi	164
Hongmei	635
Hornyphon	165
Howard Computers	636
Huafa	637
Huari	638
Humax	167
Huodateji	639
Hush	640
Hypson	168
Hyundai	169
Iberia	170
iBUYPOWER	641
ICE	171
I-Inc	484
iLo	172
Ima	173
Imperial	174
Imperial Crown	642
Indiana	175
Infinity	176
InFocus	177
Initial	178
Inno Hit	179
Insignia	180
Inteq	181
Interfunk	182
Intervision	183
iRIS	485
Irradio	184
IRT	643
Isukai	185
ITS	186
ITV	187
IX	486
Janeil	188
JBL	189
JC Penney	190
JCB	191
JCM	487
Jean	644
Jensen	192
Jiahua	645
Jinfeng	646
Jinxing	647
JVC	193
Kaisui	194
Kamp	488
Kangli	648
Karcher	195
Kawasho	196
Kaypani	489
KDS	490
KEC	197
Ken Brown	649
Kendo	198
Kenwood	199
Kioto	650
KLH	200
Kloss	491
Kloss Novabeam	201
KMDS	492
Kneissel	202
Kolin	651
Kolster	203
Konig	652
Konka	204
Korpel	205
Kosmos	206
Kost	494
Kreisen	207
KTV	208
Kunlun	653
Leyco	209
LG	210
Liesenkotter	211
Lifetec	212
Linksys	654
LiteOn	495
Lloyd's	213
Loewe	214
Logik	215
Luce	496
Luma	216
Lumatron	217
Luxman	218
LXI	219
M & S	655
MAG	220
Magnasonic	221
Magnavox	222
Magnin	223
Majestic	224
Manesth	225
Marantz	226
Mark	227
Mastro	656
Matsui	228
Matsushita	229
Maxent	230
MB Quart	497
Media Center PC	657
Mediator	231
Medion	232
Megapower	233
Megatron	234
MEI	498
M-Electronic	235
Memorex	236
Mercury	237
MGA	238
Micro	499
Microsoft	658
Midland	239
Mind	659
Minoka	240
Mintek	241
Minutz	242
Mitsubishi	243
Monivision	244
Motorola	246
Moxell	500
MTC	247
Mudan	660
Multitech	248
NAD	250
Nakamichi	501
National	661
Naxa	502
NEC	251
Neckermann	252
NEI	253
NetTV	503
Neufunk	255
New Tech	256
Newave	662
Newsonic	663
Nexus Electronics	504
Nikkai	257
Nikko	258
Niko	505
Nimbro	664
Niveus Media	665
Noblex	506
Norcent	259
Northgate	666
Norwood Micro	260
Noshi	507
Novatronic	261
NTC	262
NuVision	263
Okano	264
Olevia	265
Olympus	508
Onida	667
Onwa	266
Opera	267
Oppo	268
Optimus	269
Optoma	270
Optonica	271
Orbit	272
Orion	273
Orline	274
Osaki	275
Otic	668
Otto Versand	276
Ovation	509
Palladium	277
Panama	278
Panasonic	279
Panavision	280
Panda	669
PARK	510
PDI	511
Penney	281
Perdio	282
Perfekt	283
Petters	512
Philco	284
Philips	285
Phoenix	287
Phonola	288
Pilot	289
Pioneer	290
Planar	291
Plantron	292
Plextor	293
Polaroid	294
Polyvision	670
Portland	295
Presidian	513
Priceclub	296
Prima	297
Princeton	298
Prism	299
Profitronic	300
Projectiondesign	514
Proline	301
Proscan	302
Prosonic	303
Proton	304
Protron	305
Proview	306
ProVision	307
Proxima	308
Pulsar	309
Puneet	515
Pvision	516
Pye	310
Pyle	311
Qingdao	671
Quanta	517
Quasar	312
Quelle	313
Radialva	314
Radio Shack	315
Radiola	317
Radiomarelli	318
RadioShack	319
Radiotone	320
RCA	321
Realistic	322
Recor	323
Redstar	324
Reflex	325
Relon	672
Remotec	518
Render	519
ReplayTV	520
RevolutionHD	521
Revox	326
Rhapsody	522
Ricavision	673
R-Line	327
Rosen	328
Rowa	674
Runco	329
Sampo	330
Samsung	331
Samsux	523
Sansei	675
Sansui	332
Sanyo	333
Sanyuan	676
SBR	334
Sceptre	335
Schneider	336
Scimitsu	524
Scotch	337
Scott	338
Sears	339
SEG	340
SEI	341
Seleco	525
Semp	677
Shaofeng	678
Sharp	342
Sharper Image	526
Shen Ying	679
Shencai	680
Sheng Chai	681
Sheng Chia	343
Sherwood	527
Shogun	528
Siarem	344
Sierra	345
Signature	346
Signet	529
SIM2 Multimedia	347
Simpson	348
Sinotec	530
Sinudyne	349
Skyworth	531
Solarism	532
Sole	533
Sonic Blue	534
Sonoko	350
Sontec	351
Sony	352
Soundesign	353
Soundwave	354
Sova	535
Sowa	682
Soyo	355
Spectricon	536
Spectroniq	537
Squareview	356
SSS	357
Stack 9	683
Standard	358
Starlite	359
Starvision	538
Strato	360
Studio Experience	361
SunBrite	539
Sunstar	363
Sunwood	364
Superscan	365
Supersonic	366
SuperTech	367
Supre-Macy	368
Supreme	369
SVA	370
Sylvania	371
Symphonic	372
Synco	684
Syntax	373
Systemax	685
Tacico	686
Tagar Systems	687
Tandy	375
Tashiko	540
Tatung	376
TCL	688
Teac	377
Technics	378
Technika	689
Technol Ace	541
Techview	379
Techwood	380
Teco	542
Teknika	381
Telecor	383
Telefunken	384
Telegazi	385
Telemagic	543
Telemeister	386
Telesonic	387
Telestar	388
Teletech	389
Tensai	390
Tera	544
Thomas	391
Thomson	392
Thorn	393
Tiane	690
TMK	394
TNCi	395
Tobo	691
Tokai	396
Toshiba	397
Tosonic	545
Totevision	398
Touch	692
Trans Continens	399
Trical	546
Triumph	400
TruTech	401
TVS	402
Uher	403
Ultra	547
Ultravox	404
Unic Line	405
Universal	406
Universum	407
Univox	408
US Logic	548
UTI Technology	549
Vector Research	409
Venturer	411
VEOS	550
Vestel	412
Vexa	413
Victor	414
Video Concepts	551
Videocon	693
VideoSystem	415
Vidikron	416
Vidtech	417
Viewsonic	418
Viking	419
Villain	553
Viore	420
Visa	554
Visart	555
Visco	421
Vision	422
Vistron	556
Vito	423
Vizio	424
Voodoo	694
Vortec	425
Voxson	426
VU	695
Waltham	427
Wards	428
Warumaia	696
Watson	429
Waycon	430
Wega	431
Weltblick	432
Westinghouse	433
Wharfedale	697
White Westinghouse	434
WinBook	557
Wyse	558
XR-1000	559
Xrypton	435
Yamaha	436
Yamishi	437
Yapshe	698
Yokan	438
Yoko	439
Zenith	440
Zonda	560
ZT Group	699